



DB37-FT-990 Cable

RADIO PORT

- 1
- 20 RS232 RTS
- 2 RS232 CTS
- 21 IF - FIF
- 3 IF IN
- 22 FIF IN
- 4
- 23 FILTER OUT
- 5
- 24
- 6
- 25
- 7 FIF OUT
- 26
- 8 FILTER IN
- 27 PTT1 OUT
- 9 PTT2 OUT
- 28 CW OUT
- 10
- 29 FSK OUT
- 11
- 30 6
- 12 1
- 13 2
- 14 3
- 15 4
- 32 GND
- 14
- 33
- 15
- 34
- 16
- 35 7
- 17 8
- 36
- 18
- 37
- 19

GND

FT- 990

Notes:

Use PTT1 for CW SSB, PTT2 for digital modes

S = Sleeve

T = Tip

R = Ring